



ITEM No.	PART No.	DESCRIPTION	REQ
1	08-4321	Knob, cylinder ("B" shown)	1
2	13-2194	Cylinder Assembly	1
3	76-0027	Knob Collar	2
4	08-0365	Nylon Ring, outside (black)	1
4	08-0102	Nylon Ring, inside (white)	1
5	08-0100	Shank, outside	1
5	08-0105	Shank, outside (87)	1
5	08-0516	Cylinder Shank, outside (70, 71)	1
6	09-0019	Knob Retainer	2
7	06-0185	Knob Retainer Spring	2
8	08-2831	Locking Spindle Assy.	1
8	08-2780	Cam/Driver Assy. (87 Function)	1
8	08-4697	Key Driver Assy., outside (70, 71)	1
9	08-0214	Spiral Cam Spring (37)	1
9	08-0407	Cylinder Barrel Spring (70, 71)	1
10	76-0563	Knob Pin	2
11	08-2670	Aligning Tube Assy. (37, 87)	1
12	08-0101	Shank, inside	1
13	08-0138	Solid Driver, inside (37, 87)	1
13	08-0515	Solid Driver, inside (70, 71)	1
14	08-0166	Retainer Ring	3
15	08-4320	Knob, plain ("B" shown)	1
16	08-3312	Rose ("O" shown)	2

ITEM No.	PART No.	DESCRIPTION	REQ
17	08-2510	Guarded Latch Assy. (37)	1
17	08-2540	Guarded Latch Assy. (87 Function)	1
17	08-2517	Latch Bolt Assy.— $\frac{1}{4}$ " throw (37) (41 prefix)	1
17	08-4838	Guarded Latch Assy. (70, 71)	1
18	06-0176	Aligning Pin (37, 87)	1
18	08-0675	Aligning Pin (70, 71)	1
19	08-0200	Hold Back Cam Pin (87)	1
43	01-5000	# 8-32 x $\frac{1}{4}$ " Machine Screw	2
60	08-4733	Scalp and Aligning Tube Assy. (70, 71)	1
61	08-4687	Solenoid Assy. (71)	1
61	08-4688	Solenoid Assy. (70)	1
62	08-0508	Solenoid Cap (70, 71)	1
63	08-0509	Solenoid Holder (70, 71)	1
64	01-1178	Clamp Screw # 8-32 x $\frac{1}{4}$ " (70, 71)	1
65	01-0645	Cable Clamp (70, 71)	1

Parts List

Page No. Rev.
8.8 B